




USER MANUAL

Fixed-length Function

3

A: Use of Limit Comb: Cropped hair and hair trim
Feature: [1.5, 3, 4.5, 6, 10 & 13mm] six lengths adjustment to control the hair length.

1. To determine the length of haircut.
2. To select the appropriate limit comb.

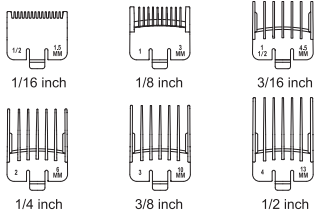


3. To fine-tune the cutter




Adjust the cutter by rotating the adjusting ring from forward to downward.

 - Mount the limit comb:
1. Align the limit comb with the blade edge
2. Slightly forward push to mount it.
Disassemble the limit comb: Just pull hard the limit comb.



Components


7

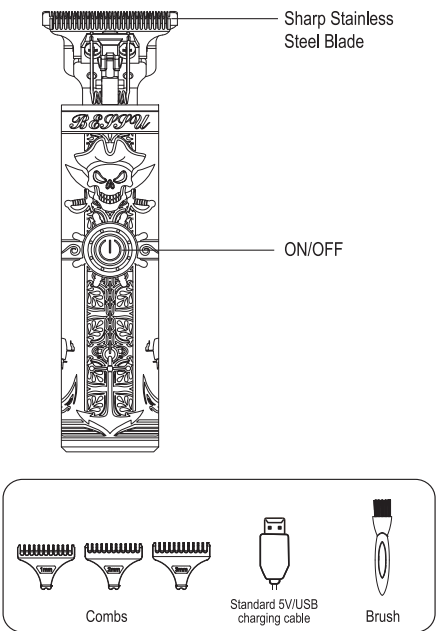

Cutter Cleaning and Maintenance


11

T – Blade Cleaning

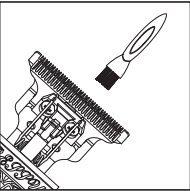

Clean up the blade with cleaning brush.

T – Blade Maintenance

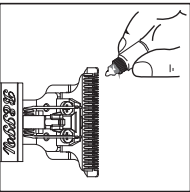

Before or after use, maintain the blade by dripping some oil on the point places like the left picture.

FK-S Hair Clipper

CONTENTS

Components 1
Parameters 2
How to Recharge 2
Fixed-Length Function 3
Cutter Assembly and Disassembly 4
Cutter Cleaning and Maintenance 5
Precautions For Use 6


FK-Y Hair Trimmer

Components 7
Parameters 8
How to Recharge 8
Fixed-Length Function 9
Cutter Assembly and Disassembly 10
Cutter Cleaning and Maintenance 11
Precautions For Use 12
Warranty Card 13



Cutter Assembly and Disassembly

4

 The sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with tight after the blade is aligned.



  1. End of the top blade teeth should be 1/32" to 1/16, 0.79mm to 1.59mm back from the bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.
2. Extreme left-hand tooth of the top blade must be covering or be to the left of the first small tooth of the bottom blade.
3. Extreme right-hand tooth of the top blade must be touching the big tooth on the bottom blade.



Taper Lever
Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever downward gradually increases the cutting length.

Warm tip: do not disassemble the knife head without any skill.

Parameters

8

Speed type	6500 RPM (±200)	Battery	1200mAh
Motor Power	10W	Blade	5Cr13 T-blade
Motor Voltage	3.0V	Material	Zinc Alloy
Charge time	2 hours	Charge method	USB Type-C
Use time	180 minutes	Input	5V 1A


How to Recharge




1. Insert the charger into the tail of the clipper, connect to the adaptor (not included) to start charging.
2. The liquid crystal indicator lights up, indicating that it starts charging, when the red light changes to the green light fully charged.

Precautions For Use

12

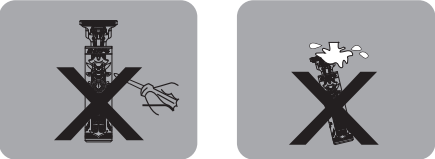



1. Please do not disassemble the product.
2. The hair trimmer can not be washed.
Please keep it away from wet conditions.

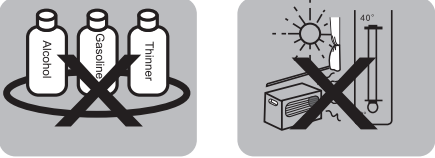

3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 40°C or below 0°C.
※ The product can produce little heat during using or charging, which is normal.
※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Components

1

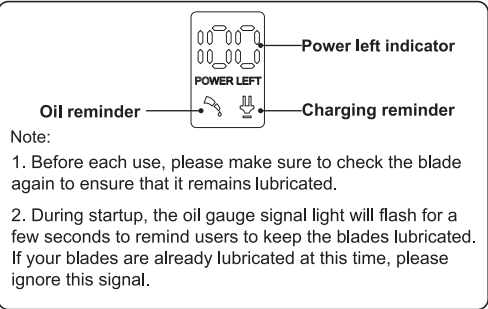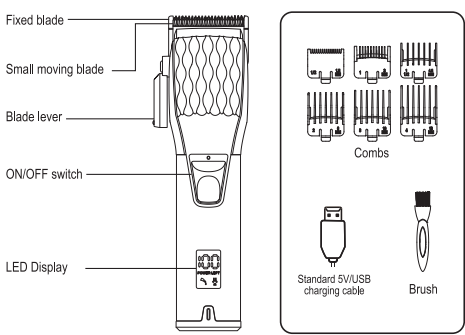

Note:

1. Before each use, please make sure to check the blade again to ensure that it remains lubricated.
2. During startup, the oil gauge signal light will flash for a few seconds to remind users to keep the blades lubricated. If your blades are already lubricated at this time, please ignore this signal.

Cutter Cleaning and Maintenance

5

 
Blade Alignment



1. Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
2. Blades must be realigned if they have been removed for cleaning or replacement.
3. To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 0.5-1.0mm back from the bottom blade. Compare your clipper blades with the sketch)
4. If blade alignment is incorrect, add a few drops of oil to the blade, turn the clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after the blade is aligned.

Cutter Maintenance

To maintain your clipper in peak condition, the blades should be oiled every few haircuts. To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.




Fixed-length Function


9

A: Features (1, 2, 3mm) 3 lengths adjustment to control the hair length.

1. To determine the length of haircut.
2. To select the appropriate limit comb.

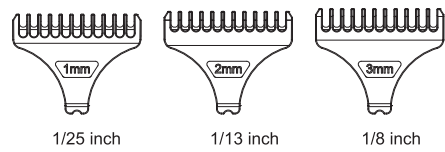

- Mount the limit comb:
1. Align the limit comb with the blade edge.
2. Slightly forward push to mount it.
Disassemble the limit comb: Just pull hard the limit comb.

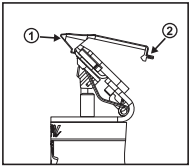

Parameters

2

Speed type	6100 RPM (±200)	Battery	2500mAh
Motor Power	10W	Blade	440C T-blade
Motor Voltage	3.0V	Material	Zinc Alloy
Charge time	2.5 hours	Charge method	Type-C/DC
Use time	300 minutes	Input	5V 1A


How to Recharge




1. Insert the charger into the tail of the clipper, connect to the adaptor (not included) to start charging.
2. The liquid crystal indicator lights up, indicating that it starts charging, when the red light changes to the green light fully charged.

Precautions For Use

6

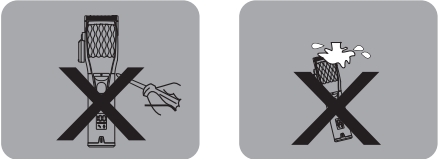

1. Please do not disassemble the product.
2. The hair clipper can not be washed.
Please keep it away from wet conditions.

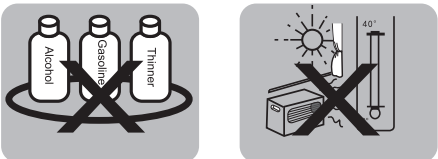

3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 40°C or below 0°C.
※ The product can produce little heat during using or charging, which is normal.
※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Cutter Assembly and Disassembly

10

 
Blade Removal




Such as a screwdriver with the rotary cutter head under part, remove the cutter head

To prevent the knife from falling, use another hand to hold it

The blade spring is aligned with the spring A on the knife head B. Then, put in two fixed screws, and hold down.



 Tighten the screw with a screwdriver to ensure the head of the knife will not fall off.



Warm tip: do not disassemble the knife head without any skill.

Warranty Card

13

Product Name	Professional Hair Clipper	Warranty Period
Product Model		One year from the purchasing date
Purchasing Date	Month Date Year	To Month Date Year
Customer	Address	Name
		Phone Number
Point of Sale	Address	Name
		Phone Number

Following Guarantees Provided For The Product

1. The product is produced through strict quality management and inspection.
2. If malfunction occurred in fair use, the consumer can enjoy free warranty service according to the warranty card in the purchasing store or our repair center.
(The battery and blade belong to consumables, not covered by warranty but provided with fee)
3. No free services for the following situations:
A. Damages caused by repair or reformation not approved by our company.
B. Damages caused by false or neglectful use, or by accidents.
C. Damages caused by natural disasters or abnormal voltage.
D. Damages caused by ignoring attentions provided with in the product specification.
4. The product is only guaranteed when provided the warranty card instead of the invoice.



24h Customer Support
Email: support@fade-king.com



备注：单页尺寸 75x100 mm

图片顺序：从左到右 共4行

订装方式：两页一张 正反面打印 共4张 16页