





USER MANUAL

FK-S Hair Clipper/FK-Y5-B Hair Trimmer

FK-S Hair Clipper	CONTENTS
Components	1
Parameters	2
How to Recharge	2
Fixed-Length Function	3
Assembly and Disassembly	4
Cleaning and Maintenance	5
Precautions for Use	6
FK-Y5-B Hair Trimmer	
Components	7
Parameters	8
How to Recharge	8
Fixed-Length Function	9
Assembly and Disassembly	10
Cleaning and Maintenance	11
Precautions for Use	12
Warranty Card	13

Components1

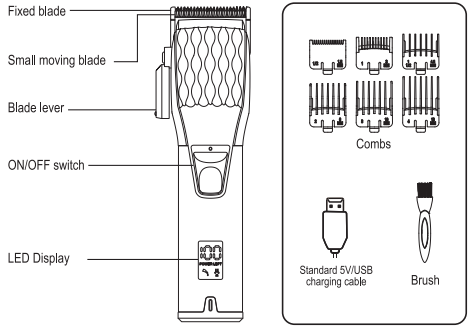


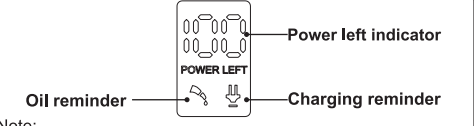


Note:
1. Before each use, please make sure to check the blade again to ensure that it remains lubricated.
2. During startup, the oil gauge signal light will flash for a few seconds to remind users to keep the blades lubricated. If your blades are already lubricated at this time, please ignore this signal.

Parameters2

Speed type	6100 RPM (±200)	Battery	2500mAh
Motor Power	10W	Blade	440C T-blade
Motor Voltage	3.0V	Material	Zinc Alloy
Charge time	2.5 hours	Charge method	Type-C/DC
Use time	300 minutes	Input	5V 1A

  How to Recharge




1. Insert the charger into the tail of the clipper, connect to the adaptor (not included) to start charging.
2. The liquid crystal indicator lights up, indicating that it start charging, when the red light changes to the green light fully charged.


Fixed-length Function3

A: Use of Limit Comb: Cropped hair and hair trim
Feature: [1.5, 3, 4.5, 6, 10 & 13mm] six lengths adjustment to control the hair length.


1. To determine the length of haircut.
2. To select the appropriate limit comb.

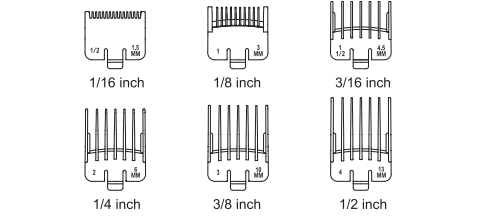

 3. To fine-tune the cutter




 Mount the limit comb:
1. Align the limit comb with the blade edge
2. Slightly forward push to mount it.
Disassemble the limit comb: Just pull hard the limit comb.




Assembly and Disassembly4


The sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with tight after the blade is aligned.

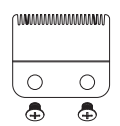

1. End of the top blade teeth should be 1/32" to 1/16, 0.79mm to 1.59mm back from the bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.
2. Extreme left-hand tooth of the top blade must be covering or be to the left of the first small tooth of the bottom blade.
3. Extreme right-hand tooth of the top blade must be touching the big tooth on the bottom blade.

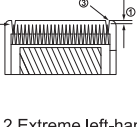



Taper Lever
Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever downward gradually increases the cutting length.

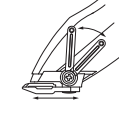

Warm tip: do not disassemble the knife head without any skill.

Cleaning and Maintenance5

  
Blade Alignment



1. Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
2. Blades must be realigned if they have been removed for cleaning or replacement.
3. To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 0.5-1.0mm back from the bottom blade. Compare your clipper blades with the sketch)
4. If blade alignment is incorrect, add a few drops of oil to the blade, turn the clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after the blade is aligned.

Cutter Maintenance

 
To maintain your clipper in peak condition, the blades should be oiled every few haircuts. To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.



Precautions for Use6





1. Please do not disassemble the product.
2. The hair clipper can not be washed. Please keep it away from wet conditions.

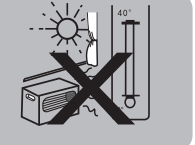

3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 40°C or below 0°C.
※ The product can produce little heat during using or charging, which is normal.
※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Components7

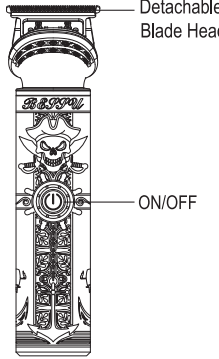


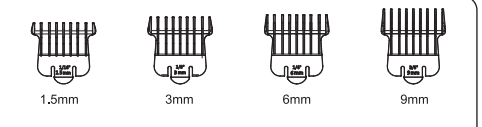




Parameters8

Speed type	6500 RPM (±200)	Battery	1200mAh
Motor Power	10W	Blade	Stainless steels
Motor Voltage	3.0V	Material	Zinc Alloy
Charge time	2 hours	Charge method	USB Type-C
Use time	180 minutes	Input	5V 1A

  How to Recharge




1. Insert the charger into the tail of the clipper, connect to the adaptor (not included) to start charging.
2. The liquid crystal indicator lights up, indicating that it start charging, when the red light changes to the green light fully charged.


Fixed-length Function9

A: Features (1.5, 3, 6, 9mm) 4 lengths adjustment to control the hair length.

1. To determine the length of haircut.
2. To select the appropriate limit comb.

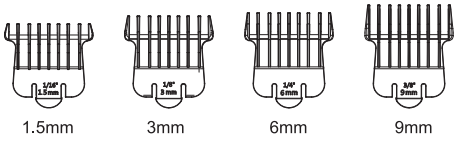



Mount the limit comb:
1. Align the limit comb with the blade edge.
2. Slightly forward push to mount it.
Disassemble the limit comb: Just pull hard the limit comb.

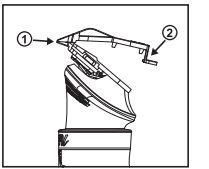

Assembly and Disassembly10


Remove the heads

Push the blades in the direction of the arrow shown in the figure (Fig. 1-2)

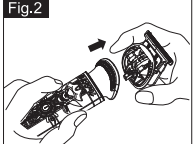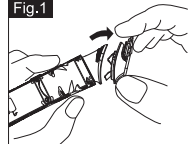

Install the heads


Align the protruding part (Fig. 3 ③) of the blade with the body groove (Fig. 3 ④), press the blade in the direction of the arrow (Fig. 4)

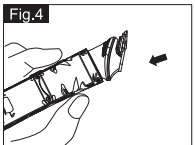

Cleaning and Maintenance11

To ensure optimal functionality, clean the trimmer after each use.

1. Before cleaning the trimmer, make sure it is turned off and not being charged.
2. Remove the trimming comb and blade head and use the provided cleaning brush to clean out the blade head slot and blade teeth.
3. The trimming comb, blade head, trimmer, and trimming comb slot can be rinsed with water. All components should be dried immediately after rinsing.
4. Water on or near the charging port should be dried before storing the device.
5. After drying, it is recommended to add lubricating oil to maintain smooth operation before reattaching the blade head to the trimmer.
6. It's normal for the blade to get warmer during use. Add the included blade oil onto the five points illustrated below, to keep the blade running normally.

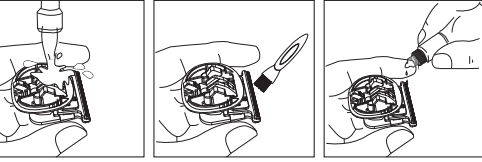


Notes:
The trimmer's service life depends on the frequency of use and whether it is properly maintained.
Do not use compressed gas, steel wool, abrasive cleaning agents, corrosive liquids (such as gasoline or acetone) and sharp objects to clean this trimmer.

Precautions for Use12



1. Please do not disassemble the product.
2. The hair trimmer can not be washed. Please keep it away from wet conditions.

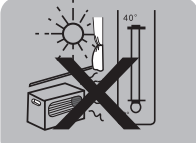

3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 40°C or below 0°C.
※ The product can produce little heat during using or charging, which is normal.
※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Warranty Card13

Product Name	Professional Hair Clipper	Warranty Period
Product Model		One year from the purchasing date
Purchasing Date	Month Date Year	To Month Date Year

Customer	Address	Name	
		Phone Number	
Point of Sale	Address	Name	
		Phone Number	

Following Guarantees Provided For The Product

1. The product is produced through strict quality management and inspection.
2. If malfunction occurred in fair use, the consumer can enjoy free warranty service according to the warranty card in the purchasing store or our repair center.
(The battery and blade belong to consumables, not covered by warranty but provided with fee)
3. No free services for the following situations:
A. Damages caused by repair or reformation not approved by our company.
B. Damages caused by false or neglectful use, or by accidents.
C. Damages caused by natural disasters or abnormal voltage.
D. Damages caused by ignoring attentions provided with in the product specification.
4. The product is only guaranteed when provided the warranty card instead of the invoice.



24h Customer Support
Email: support@fade-king.com



备注：单页尺寸 75x100 mm

图片顺序：从左到右 共4行

订装方式：两页一张 正反面打印 共4张 16页