



 
USER MANUAL
FK-95109 Clipper/FK-95509 Trimmer

Fixed-length Function

3

A: Use of guide Combs: Crop and trim the hair Options: (1.5, 3,4,5,6,10,13,16,19,22,25mm) 10 length adjustment options, they help to control the length of the hair that is cut.

- To determine the length of haircut.
- To select the appropriate limit comb.

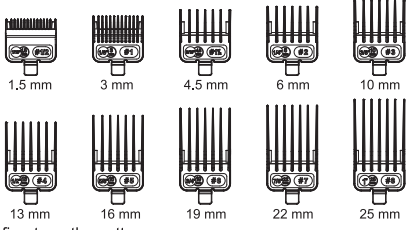


- To fine-tune the cutter



Adjust the cutter by rotating the adjusting ring from forward to downward.


Mount the limit comb:

 - Align the limit comb with the blade edge.
 - Slightly forward push to mount it.
- Disassemble the limit comb: Just pull hard the limit comb.




Components

 7

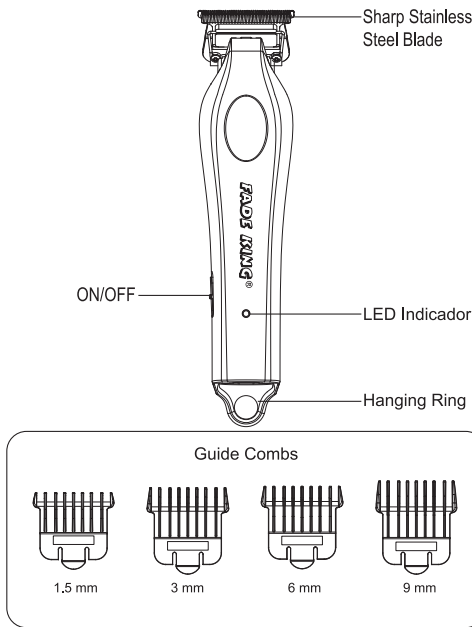

 
Be sure that the blades are aligned properly. The teeth of the smaller blade (cutter) should rest slightly below the upper edge of the larger blade (comb) approximately 1/64" to 1/32" apart. If the blades are not correctly aligned, they may cut or scratch your skin when trimming. Once the blades have been aligned, tighten the screws firmly.



Cutter Cleaning and Maintenance

- Before using your new trimmer, please make sure to oil them for optimal performance. Proper maintenance will help extend the life time of your trimmer and ensure the best cutting experience.
- In order to use the trimmer conveniently and quickly, we recommend that you clean the trimmer regularly, otherwise it will affect the performance and life of the trimmer. Regular cleaning for trimmer to keep in good condition to prevent the growth of odor and bacteria, and keep the blade sharp.

 - Turn off the power of the trimmer.
- Cleaning the hair of the trimmer head and cutter head with a cleaning brush, blow it clean with a blower and fill the blade with a few drops of oil.

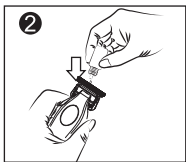

FK-95109 Clipper

CONTENTS

Components	1
Parameters	2
How to Recharge	2
Fixed-Length Function	3
Cutter Assembly and Disassembly	4
Cutter Cleaning and Maintenance	5
Precautions For Use	6


FK-95509 Trimmer

Components	7
Parameters	8
How to Recharge	8
Fixed-Length Function	9
Cutter Assembly and Disassembly	10
Cutter Cleaning and Maintenance	11
Precautions For Use	12
Warranty Card	13


Cutter Assembly and Disassembly

4

 The blades must be realign if they have been removed for cleaning or replacement. As shown in the image is the right the bottom blade holes are wider than the shanks of the blades screws. After the screw of the bottom blade is loosened, adjust the distance of lower blade, and align it with the upper blade, then tighten it.

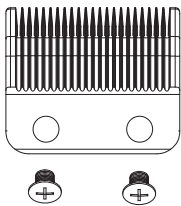

- The end of the upper blade teeth should pumm be 0.5mm away from the lower blade Junine when the lever is in the uppermost. This must be done so that the clippers will not cut too closely or allow any moving parts to come in contact with the skin.
- The left most tooth of the upper blade must be covering or in the left position of the first small tooth of the bottom blade.
- The right most tooth of the top blade must be touching the large tooth on the bottom blade.

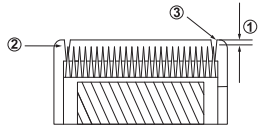 


Parameters

8

Professional Trimmer	Motor	Operating voltage: 3V= High performance motor
	Battery	2500 mAh Li-Ion battery Charging time: about 2 hours Operating time with full charge: about 4 hours
	Applicable Adapter Type	Input: 100-240V-50/60Hz Output: 5V=1000mA Output cannot exceed 5V, otherwise the device will burn out, resulting in a permanent end to its operational life.

How to Recharge

 
- Insert the charger into the rear port of clippers, connect to a power supply to begin charging.
- When the red light flashes in non-charging state, it means to remind you to charge, and when the green light is always on in charging state, it means full charge. The following is a description of the status of the various indicators in the non-charging and charging states.




Usage Indicators	Battery left	Charging Indicators	Battery left
Green Light On	100%-60%	Red Light Flashing	<20%
Yellow Light On	60%-20%	Yellow Light Flashing	20%-60%
Red Light On	20%-10%	Green Light Flashing	60%-99%
Red Light Flashing	10%-0%	Green Light On	Fully Charged

Precautions For Use

 12

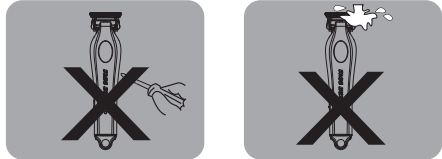


 
- Please do not disassemble the product.
 - The hair trimmer can not be washed.
- Please keep it away from wet conditions.

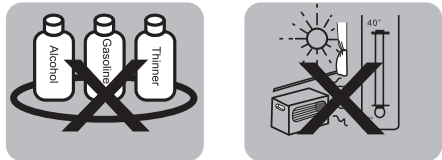

- The product can only be cleaned by cloth with little water or mild soap solution.
- Do not charge the product under environment above 40°C or below 0°C.
- The product can produce little heat during using or charging, which is normal.
- Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Components

  1

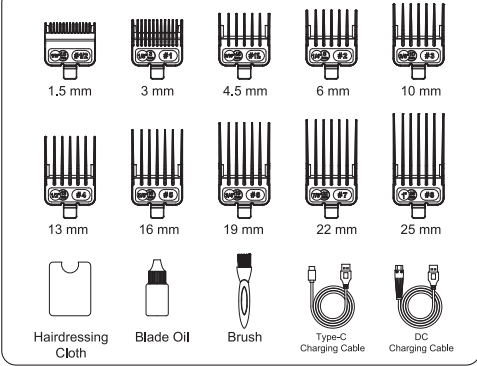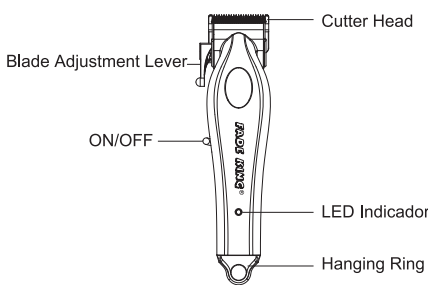



Cutter Cleaning and Maintenance

5

- Before using your new hair clippers, please make sure to oil them for optimal performance. Proper maintenance will help extend the life time of your clipper and ensure the best cutting experience.

- In order to use the dipper conveniently and quickly, we recommend that you clean the clipper regularly, otherwise it will affect the performance and life of the clipper. Regular cleaning for clipper to keep in good condition to prevent the growth of odor and bacteria, and keep the blade sharp.

  - Turn off the power of the clipper.
- Cleaning the hair of the clipper head and cutter head with a cleaning brush, blow it clean with a blower and fill the blade with a few drops of oil.

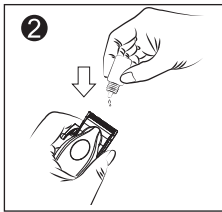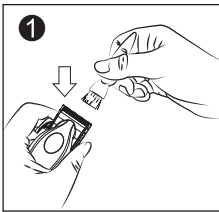


Fixed-length Function

9


A: Features(1.5、3、 6、 9mm)4 lengths adjustment to control the hair length.

 - To determine the length of haircut.
- To select the appropriate limit comb.

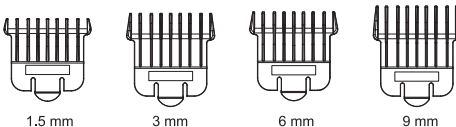

Mount the limit comb:

 - Align the limit comb with the blade edge.
 - Slightly forward push to mount it.
- Disassemble the limit comb: Just pull hard the limit comb.

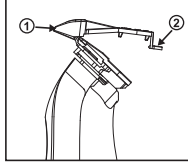

Warranty Card

13

Product Name	Professional Hair Clipper	Warranty Period
Product Model		One year from the purchasing date
Purchasing Date	Month Date Year	To Month Date Year
Customer	Address	Name
		Phone Number
Point of Sale	Address	Name
	Name	Phone Number

Following Guarantees Provided For The Product

- The product is produced through strict quality management and inspection.
- If malfunction occurred in fair use, the consumer can enjoy free warranty service according to the warranty card in the purchasing store or our repair center.
- No free services for the following situations:
A. Damages caused by repair or reformation not approved by our company.
B. Damages caused by false or neglectful use, or by accidents.
C. Damages caused by natural disasters or abnormal voltage.
D. Damages caused by ignoring attentions provided with in the product specification.
- The product is only guaranteed when provided the warranty card instead of the invoice.


Parameters

2

Professional Hair Clipper	Motor	Operating voltage: 3V= High performance motor
	Battery	2500 mAh Li-Ion battery Charging time: about 3 hours Operating time with full charge: about 5 hours
	Applicable Adapter Type	Input: 100-240V-50/60Hz Output: 5V=1000mA Output cannot exceed 5V, otherwise the device will burn out, resulting in a permanent end to its operational life.

How to Recharge

 
- Insert the charger into the rear port of clippers, connect to a power supply to begin charging.
- When the red light flashes in non-charging state, it means to remind you to charge, and when the green light is always on in charging state, it means full charge. The following is a description of the status of the various indicators in the non-charging and charging states.

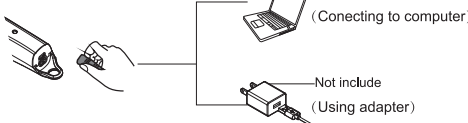


Usage Indicators	Battery left	Charging Indicators	Battery left
Green Light On	100%-60%	Red Light Flashing	<20%
Yellow Light On	60%-20%	Yellow Light Flashing	20%-60%
Red Light On	20%-10%	Green Light Flashing	60%-99%
Red Light Flashing	10%-0%	Green Light On	Fully Charged

Precautions For Use

 6

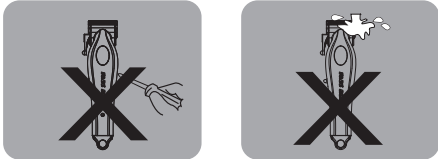

 - Please do not disassemble the product.
 - The hair clipper can not be washed.
- Please keep it away from wet conditions.

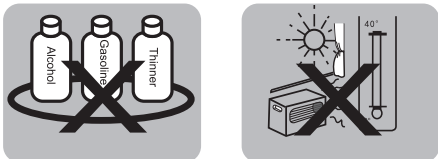

- The product can only be cleaned by cloth with little water or mild soap solution.
- Do not charge the product under environment above 40°C or below 0°C.

 
- The product can produce little heat during using or charging, which is normal.
- Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Cutter Assembly and Disassembly


10

To Remove:

Use an appropriate screwdriver to gently turn the two small screws on either side of the blade counterclockwise to loosen them.

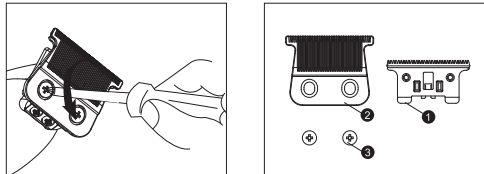

To Install:

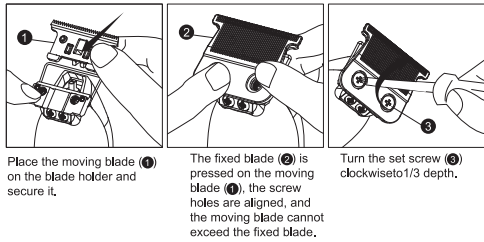 

Warm tip: do not disassemble the knife head without any skill.

备注：单页尺寸 75x100 mm

图片顺序：从左到右 共4行

订装方式：两页一张 正反面打印 共4张 16页